

# **Astrel Instruments**

**AST8300-X**

**GETTING STARTED**

**rev A**


## Getting started with the Astrel Instruments camera

Thank you for purchasing an Astrel Instruments CCD camera. Your new camera is a leading edge scientific instrument: please take your time to read carefully the following User's Manual to learn how to get the best out of your equipment.

The philosophy behind your camera is the concept that the CCD camera could be the real brain of your astronomical equipment. This is possible thanks to the powerful microprocessor that is in charge of managing not only the camera itself but also, through the extended set of I/O available on-board, the other components of your system.

## Camera connections

The following picture shows the I/O interfaces available:

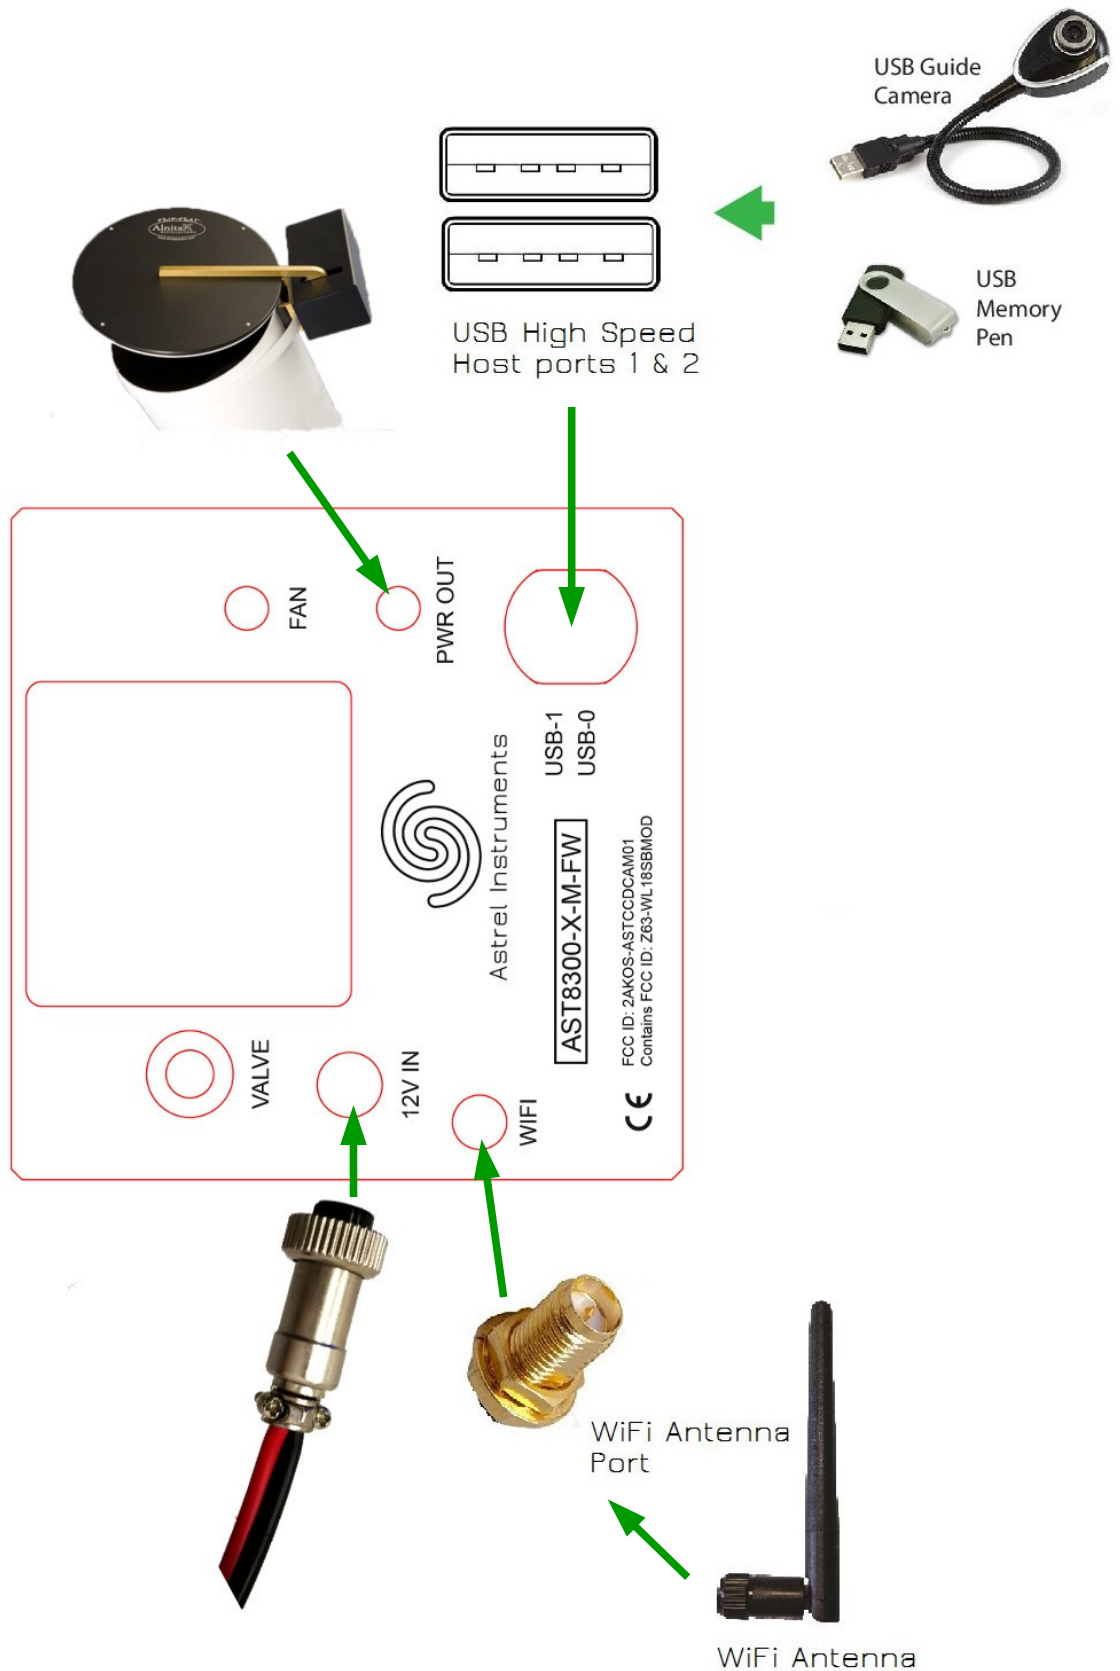

The following connectors are available on the camera:

- **12V:** the camera needs a 12V 3A power supply. The use of the included 3 meters cable with its filter box is strongly suggested to connect the camera to a car lighter receptacle using the included adapter, or to the optional 12V 3A power supply.
- **USB 1&2:** these two 480Mbit/sec hi speed USB connectors can be used to connect devices like USB dongles, guide cameras, keyboards and mice. USB hub can be used when multiple connections are needed. Each USB port can drive max 500 mA.
- **WiFi:** this SMA connector is used for the included WiFi Antenna.
- **Flatbox controller:** 12V controlled power out for powering your flatbox with the included cable. The flatbox can be controlled using the flat maker app on the camera desktop

## Powering up the camera

To correctly power up the camera, please follow this sequence:


- Connect the wifi Antenna.
- Connect USB devices. Most of them can be connected and disconnected at any time, but it's always a good rule to connect any needed device before power up.
- Connect the power supply cable.

After the power supply is connected, the camera boots the Linux operating system and then starts the Desktop application, from where all the camera's applications can be accessed.

## Powering down the camera

**WARNING:** never power down the camera by simply disconnecting power supply: your camera has a true PC inside running Linux and, as any other PC, you should shut it down in the correct way. The Shutdown application in the main page of the Desktop will take care of all this sequence, so, before powering down the camera you must run the Shutdown application. After pressing shutdown, the camera will disconnect from wifi and emit a certain number of regularly timed weak beep sounds. When the beeps end the camera can be powered off unplugging the power cable. In case the beeps can't be heard, after shutdown wait for 1 minute before unplugging the power cable.

The Linux distribution inside the camera is stored into the internal SD card, which is the main storage of the camera. In unlikely situations, removing the power supply while the operating system or any application is writing on the SD card could damage the files stored on it.

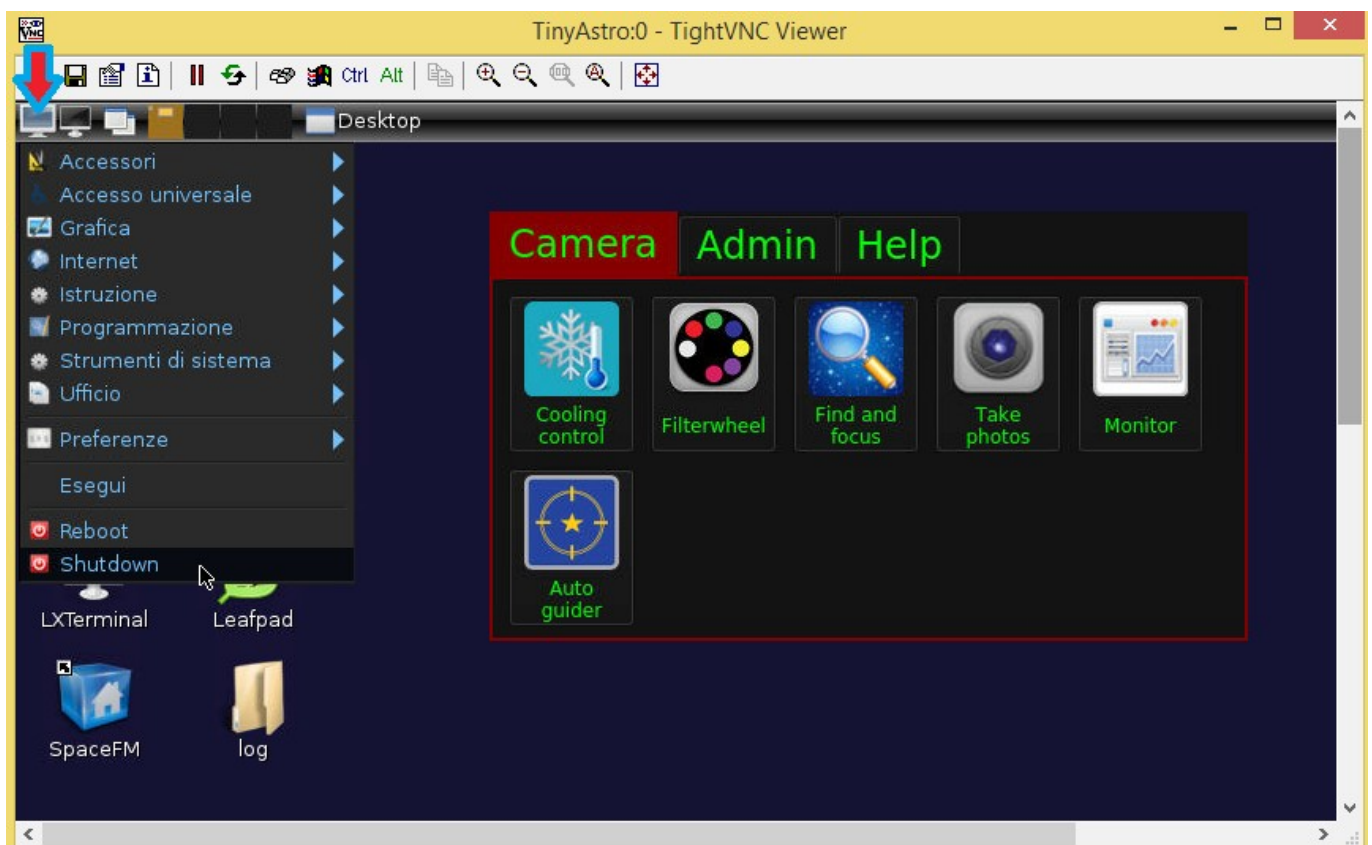

## Wifi operations

The camera acts as a WiFi access point, like a normal wifi router, that you can connect to using a PC/tablet/smartphone. The wifi connection is open, no password required, and by default the network name is **Astrel\_ap\_** followed by the camera **s/n** while the ip address is **10.0.0.1**.


**WARNING: remember to connect the WiFi antenna.**

Once connected, you can operate the camera in Connected mode like described in the following paragraph.

## PC/tablet/smartphone Connected mode

The camera is operated using the collection of applications available on-board, which can be accessed using any **VNC** compatible remote desktop application on a PC/tablet/smartphone with wifi connection.

Astrel proprietary applications are collected on the Astrel Desktop, which is organized in pages of icons corresponding to applications. When choosing one tab, a different page of icons is displayed. The applications and tabs can be customized modifying the desktop.cfg file. Here follows a screenshot of the main Desktop page:

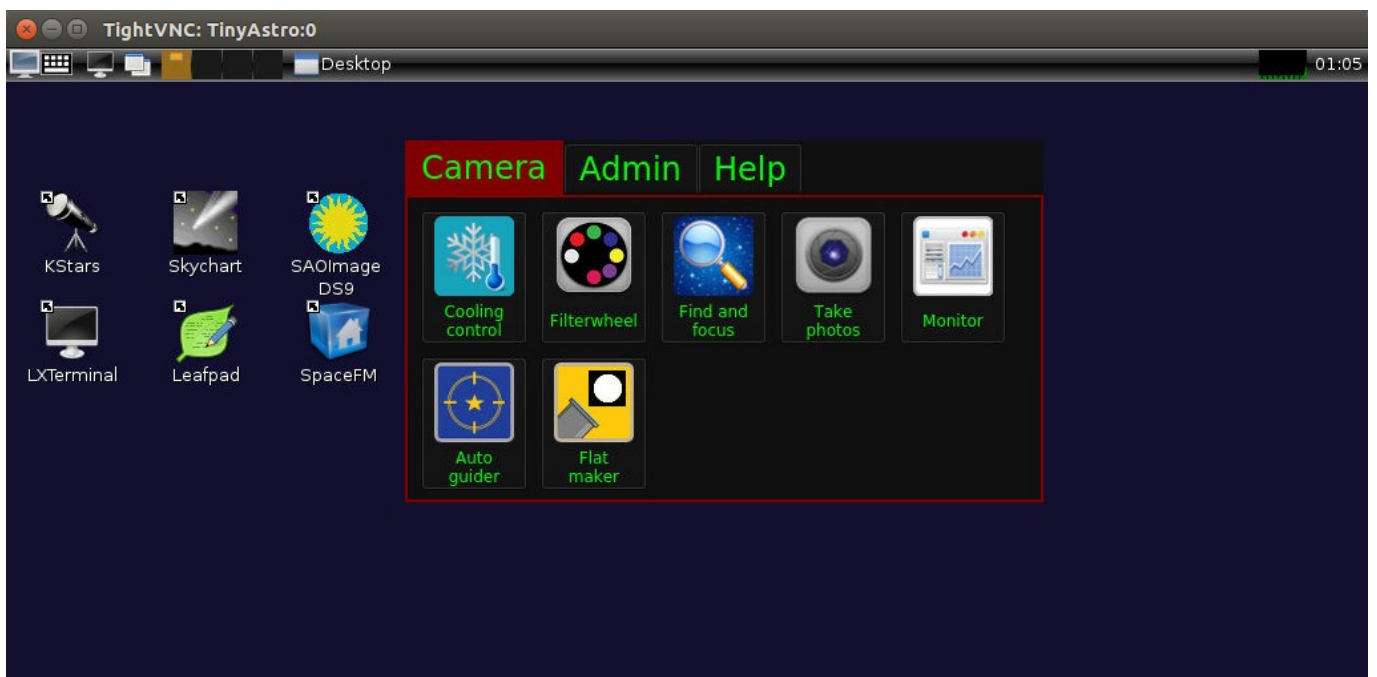

Other third-party applications are available on the Linux Desktop.

When operated in Connected mode, you only have to install a VNC client application on the PC/tablet/smartphone, which is an application used to show the camera Desktop in a window in the PC screen. There's no need to install any driver on the PC because the applications always run on the camera, not on the PC, and all the communications use the wifi connection. This is why you can run the same applications even with a tablet/smartphone.

Many free VNC client are available for many architectures: here follows a brief list of the tested ones:

- PC/Windows: TightVNC (<http://www.tightvnc.com/>)
- PC/Linux: TightVNC (<http://www.tightvnc.com/>)



- Android: akRDC Free (available on the store)
- Windows Phone: TinyVNC (available on the store)

To install them just follows the steps indicated on their websites.

**WARNING:** closing the VNC client application doesn't shut down the camera: the VNC client only shows the camera applications on the PC screen. That means that you always have to run the Shutdown application before powering down the camera.

## Accessing the camera storage

The basic camera main storage is the internal 8Gb SD card, where the operating system and the photos are stored. You can add more storage by simply connecting a USB dongle or even a USB hard disk to either USB connectors.

If you need to access other folders (for example a USB dongle or hard disk) or simply prefer to use a file-manager like application, you can use any remote file-manager application using the ssh protocol: here follows a brief list of the tested ones:

- PC/Windows: WinSCP (<http://winscp.net>)
- PC/Linux: any file manager opening the location `ssh://<camera ip address>`

The username is ***astro*** and the password is ***astronomy***.

## Using the vacuum pump

The camera adopts a low vacuum approach to avoid frosting on the CCD glass, filters and optical window. Using the included vacuum pump, you can remove the air from inside the camera, so that there's no more water vapor to freeze on the CCD glass and filters. Moreover, reducing the air inside the camera minimizes the heat exchanges due to convection, so the optical window never get too cold due to the low CCD and cold finger temperature. The included pump is typically able to reach about **25-26 inHg** vacuum in less than a minute of operation, but anything above 24 inHg is enough. The vacuum pump gauges have a tolerance of about +/- 1 inHg, refer to the "Important Notice" sheet provided with the camera to get the proper vacuum level to be set before cooling the camera. The camera is tested to maintain a vacuum better than 24 inHg for at least two days and it's not unusual for cameras to last for weeks, so there's no need to operate the pump during a photo session.

Always keep the vacuum valve closed even when the camera is not working. When the camera is not used for long periods, it is advisable to put it into an air tight envelop.

**WARNING:** never get the camera below the freezing temperature without evacuating it to an acceptable vacuum level: you will run the risk of frost creation on the CCD glass and even produce a permanent damage to the camera.

## Tutorial: from power up to the first photo

This tutorial will guide you in the process of making your first photo with your camera. We will use Windows in Connected mode: most of the steps are the same also with Linux in Connected mode, while many steps are not needed in Stand Alone mode.

### **STEP 1: evacuate the camera**

- Insert the pump connection tube into the vacuum pump nose
- Screw the pump to the camera's valve
- Pump the air until 25 inHg is reached: if the vacuum level keeps going back to 0, push the pump nose as much as possible inside the tube and screw the tube as much as possible inside the valve, until the vacuum is retained: this means that the pump is correctly connected to the camera
- Open the vacuum valve (the handle should be perpendicular to the camera back)
- Pump the air until a level of 25 inHg vacuum is reached
- Close the valve
- Disconnect the pump and remove the tube
- The camera is now ready for being cooled below freezing temperature and the vacuum should be retained to an acceptable level for at least 2 days
- You can check the vacuum level connecting the pump to the camera, pumping the air until a level of 25 inHg vacuum is reached with the vacuum valve closed to remove the air inside the connecting tube, and then opening the vacuum valve and reading the vacuum level. **Remember to close the valve before disconnecting the pump**
- **Note:** the level of vacuum of 25 inHg could not be possible to reach on high altitude locations. In this case pump the air until it can't get any lower


### **STEP 2: power up the camera**

- Plug the WiFi Antenna to the camera and the PC
- If needed plug any USB device and hub to the USB ports
- Plug the power supply


After booting (usually after few seconds) the camera emits a weak sound meaning that it is ready for operation and waiting for VNC connection.

### **STEP 3: connect to the camera**

- Look for the camera access point name (the default one is Astrel\_ap\_<serial>) and connect your device to it.
- Windows will complain because the access is limited but this is normal because you don't have an internet connection, only a local connection.
- Start the VNC viewer. When prompted, insert the camera IP address **10.0.0.1** in the Remote Host field, like in the following screenshot:

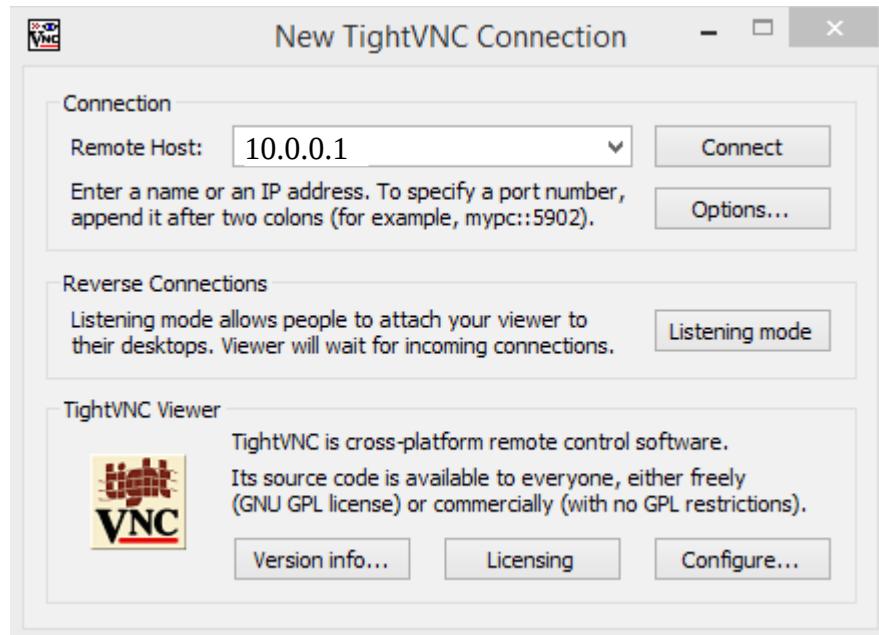


After connection, the VNC viewer window will display the Linux Desktop that includes the Astrel Desktop and the icons of the third-party applications:

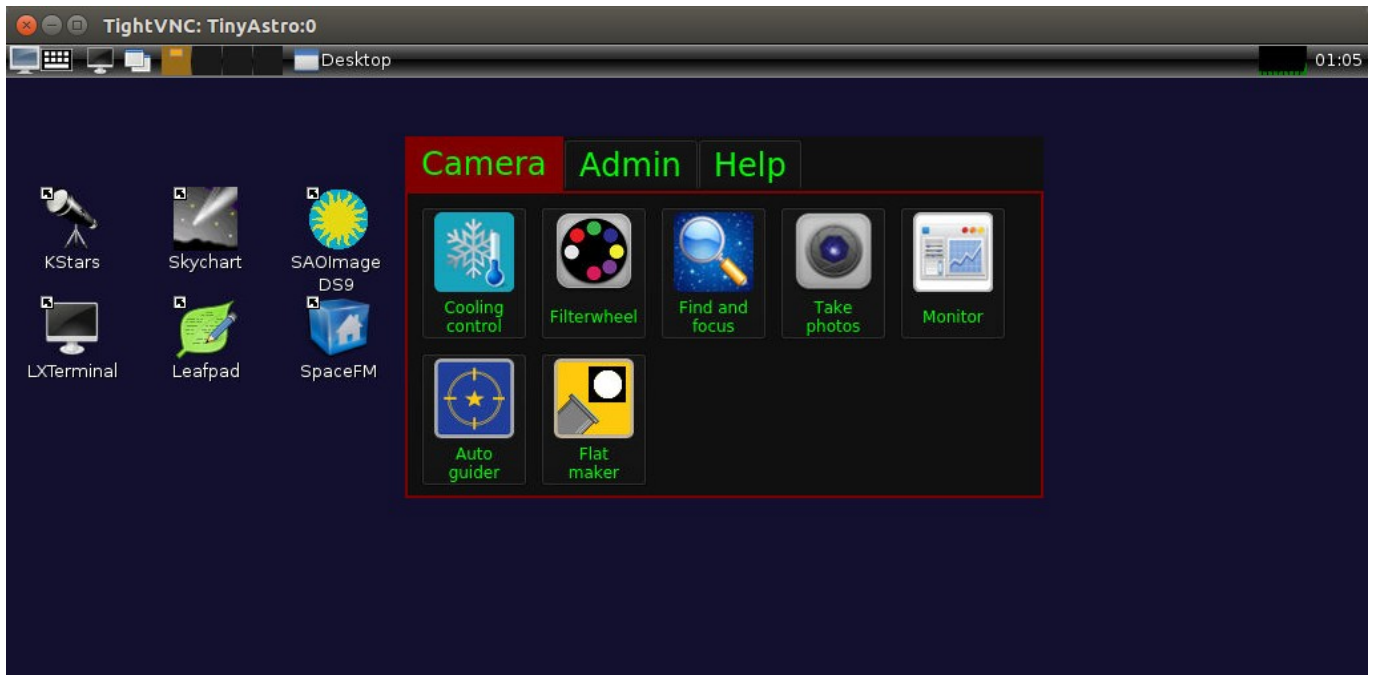

#### STEP 4: start the cooling process


- Start the Cooling Control app and insert the desired temperature set point, then push the **Start** button. The application will work in background maintaining the temperature set point with a  $\pm 0.1^{\circ}\text{C}$  precision.

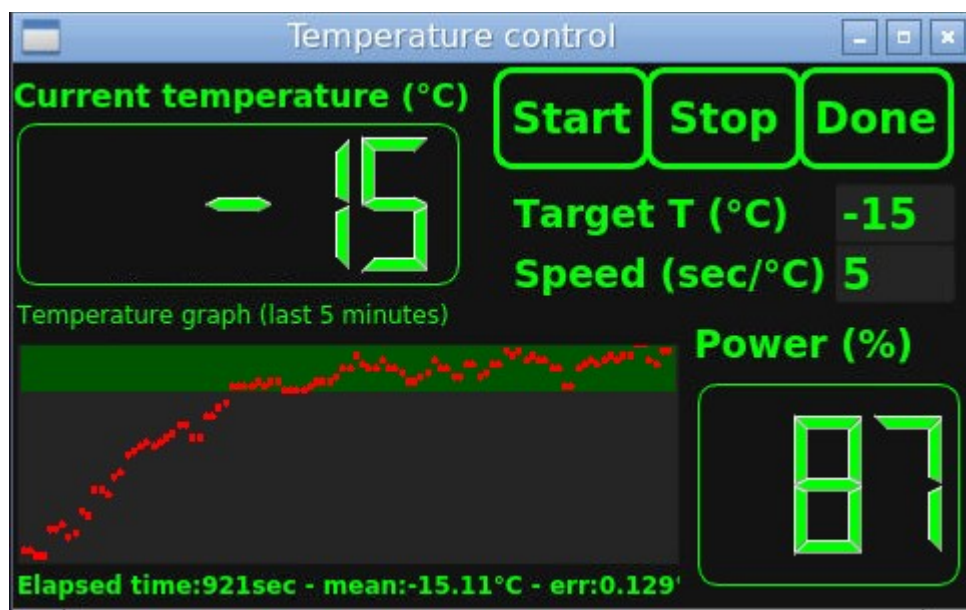

- The cooling process needs some time to reach a stable temperature set point, so we will use this time to find and focus the object to photograph.

### **STEP 5: select a filterwheel position**


- Start the Filterwheel app clicking the icon on the desktop, then push the desired filter button and push **go**:

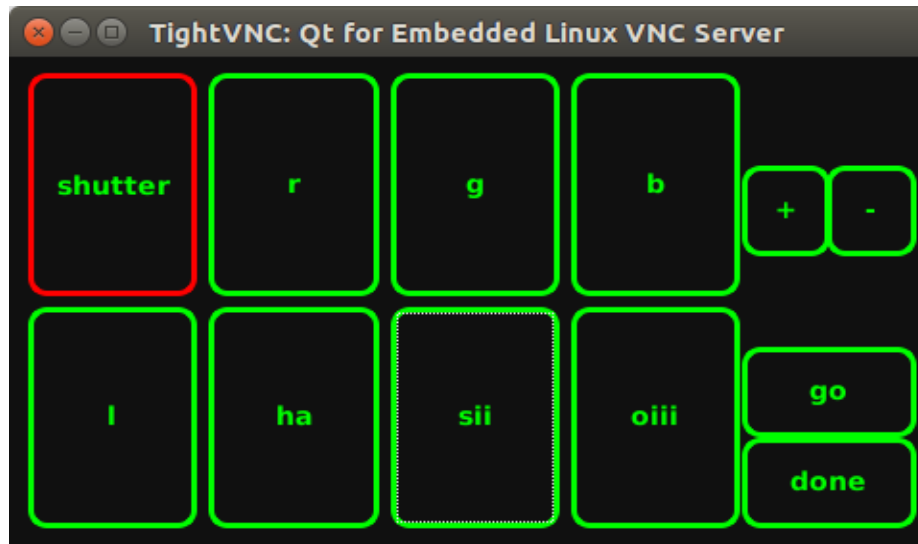


- Push **done** to leave the Filterwheel application.

### **STEP 6: find and focus**

- Start the Find & Focus application to focus the camera and frame the object. Push **live** to start acquiring images. You can change the exposure time on the fly depending on your target brightness: remember that the value refers to tenth of seconds, so for 5 seconds exposure you have to write the value 50.

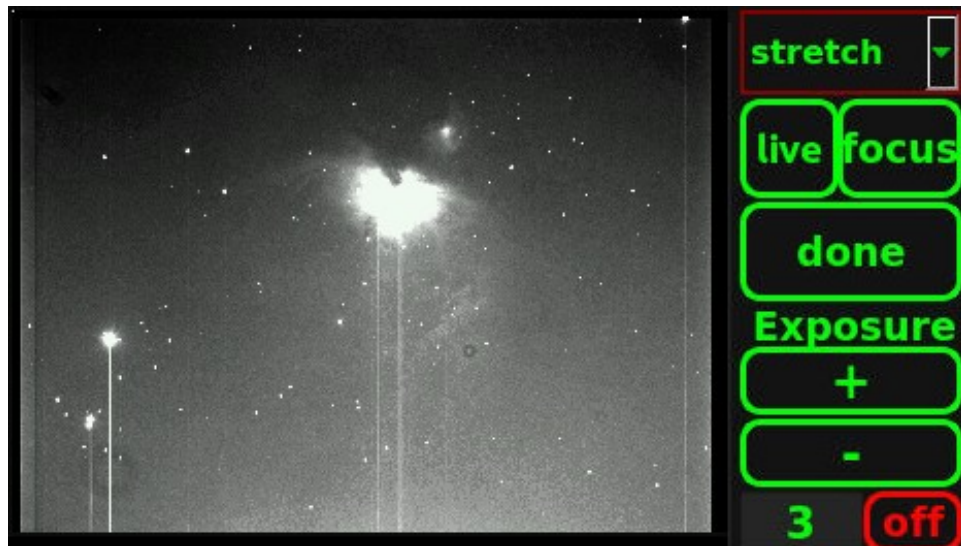

- When in liveview, frame a medium brightness star, push **focus** and you will be asked to click on a star in the field. After you click the selected star, the focus interface is started displaying an enlargement of a small portion of sky around the star. The refresh rate depends on the exposure time and can be as fast as nearly 3 frames per second

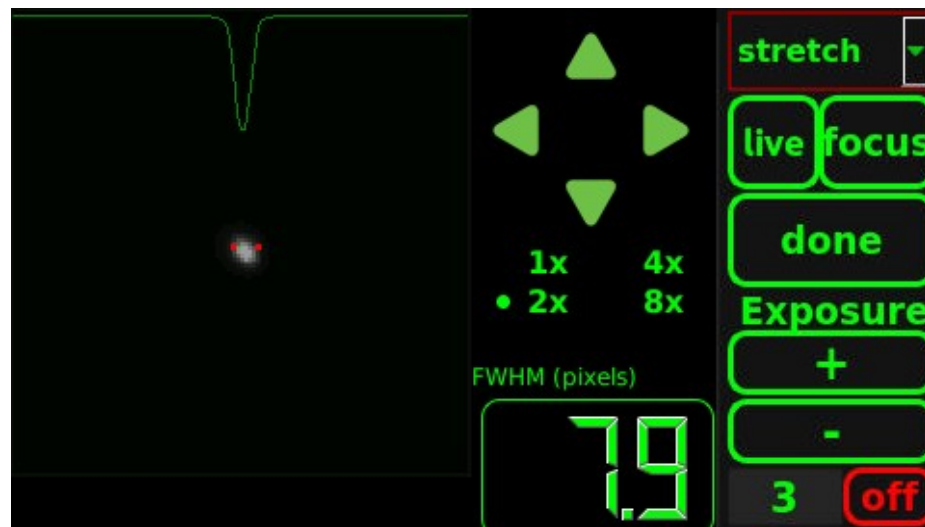

- The focus interface displays the star along with a measure of the Full Width Half Maximum and a plot of the intensity profile: use these parameters together with eye inspection to focus the camera. You can change the exposure time and the enlargement of the star field, as well as move around using the arrow buttons
- At the end of the focus process, in order to verify the focus accuracy, it could be useful, when permitted by the precision of the mount motors, to set the exposure time to 15-20 seconds to possibly show many stars of different brightness. This can also be done after



framing the object to photograph.

- Push **live** again to come back to the liveview interface and frame your object. With liveview taking images in 10x10 binning mode, even an exposure of a few seconds easily reveals most deepsky objects, making the framing process very easy.

### ***STEP 7: check temperature stability***

- The cooling process should reach a stable set point temperature after 10-15 minutes depending on the environment. The time needed to reach the selected temperature set point may be shorter, but the algorithm needs some more time to calibrate in order to maintain a temperature stable to less than 0.1°C
- Push **Done** to leave the cooling app when temperature is reached: leaving the application doesn't stop the cooling process. Next time you open the Temperature Monitor application it will display the current cooling process state, until you push the **Stop** button, which will ramp down and switch off the cooling process.

### ***STEP 8: set the exposure parameters and start photographing***


- Start the **Take Photos** application.
- Using the tabs named as the filters you set in the Setup application, you can define for each filter the exposure time, the number of exposures and the binning level. Remember to check the **enable** box in order to use the selected filter.
- Choose a photo sequence name. If you omit a path before the name, the photo sequence will be stored in the default photo folder, which is the '/home/astro/photos' folder. Advanced user can use any existing path on the camera where they have the permission to write
- Each photo of a sequence can be identified using its name. For example, the third exposure with the second filter of the 'm31\_lrgb' photo sequence will be saved as 'm31\_lrgb\_filt2\_clear\_3.fits'



- Start the photo sequence pushing the **SHOT!** Button.

Note: During photo download from the ccd the camera turns off the wifi and the fan in order to minimize readout noise. After the completion of the photo (a weak sound signals it) all these functions turn on again. Your PC or Smartphone could need to reestablish the connection to the camera.

- Using the Monitor application you can monitor the sequence execution

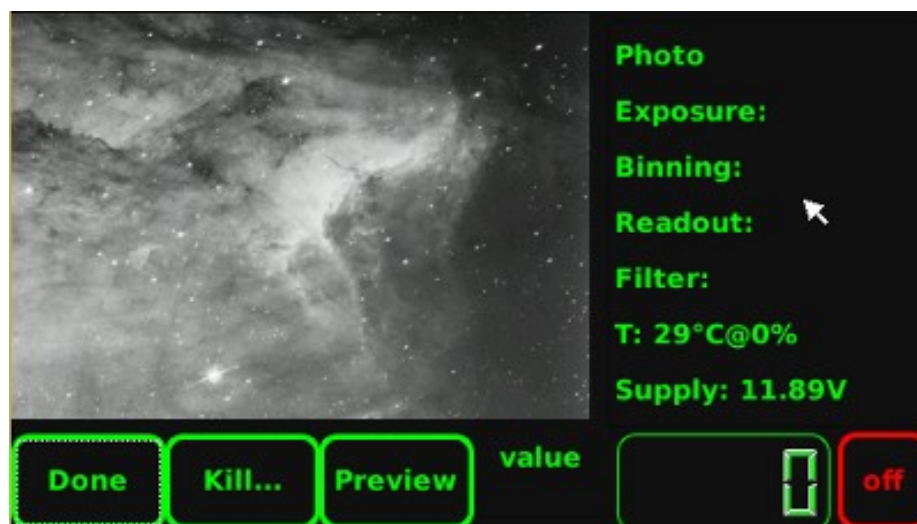

- Push **Kill** to stop the photo sequence. You will be asked whether to stop only the current exposure or the whole sequence
- Push **Preview** to see a thumbnail of the last exposure
- Push the **Done** button to come back to the Desktop

**STEP 9: download the images to a PC**

- The camera saves the photos on its internal SD card or on an external USB storage. There's no need to download them on a PC during the observing session: you can copy/move the images to a PC in many ways, here follows the most common:
- Method 1: use WinSCP:
- Open WinSCP and create a new connection.
- Choose SFTP protocol and insert the camera ip address (10.0.0.1), port 22, your user name (astro) and password (astronomy)
- Copy the files/folders as needed
- Method 2: If you stored the photo sequences in an external USB storage, you can of course disconnect it from the camera and plug it to the PC.

**WARNING:** never disconnect the USB storage before correctly unmount it (see the tutorial for the procedure).