


Astrel Instruments

AST-8300-A SW TOOLS USER GUIDE rev D

Find and Focus tool

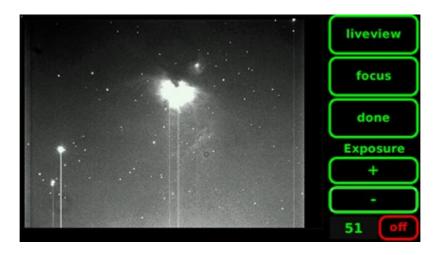


The Find and Focus tool is used to frame the desired sky view and/or to adjust focus.

Touch the **liveview** button to frame the photo:

- in this modality, the image is continuously refreshed using 5x10 binning
- you can vary the exposure using the + and buttons or touching the displayed exposure (tenths of seconds) value and modifying it using the virtual keyboard
- the high binning level enables detection of very faint objects with exposures in the seconds range

When in liveview mode, you can touch the **focus** button to start the focus process:

- you're asked to select a star touching it in the image displayed by the liveview mode
- after selecting the star, the focus mode window is displayed as shown in the following figure:

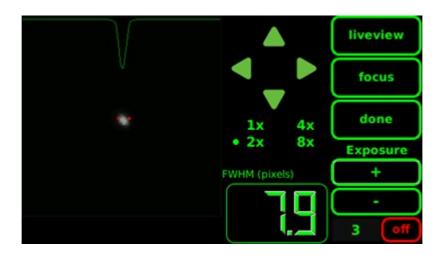

- · the frame on the left shows an enlarged view of the selected star
- the zoom factor can be set to the following levels: 1x, 2x, 4x, 8x
- the star can be finely centered using the arrows buttons
- you can vary the exposure using the + and buttons or touching the displayed exposure
 value and modifying it using the virtual keyboard
- during the focus process, a big led-styled number shows the FWHM of the star in tenths
 of pixel together with the intensity profile graph

Touch the **off** button to switch off the monitor to save batteries power. The monitor can be switched back on by touching any point in the screen.

Touch the **done** button to quit the tool and go back to the desktop.

SW Tools UG 3/14 rev D

Filterwheel tool



The Filterwheel tool is used to control, where available, the integrated filter wheel, to select a filter for the Find and focus tool.

Use the **8 big buttons** related to the filters plus shutter positions in order to select one of them. The filters name reflects the one set using the ast8300.cfg configuration file of the camera. See "Admin Tools User Guide" to modify them.


Touch the **go** button to move the wheel to the selected filter position.

Touch the +/- buttons to make small movements. This buttons are only needed during the filter installation procedure.

Touch the **done** button to leave this screen and go back to the desktop.

SW Tools UG 4/14 rev D

Temperature

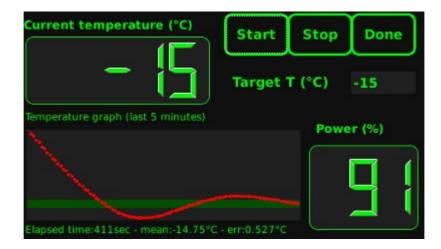

The **Cooling control** tool provides means to control and monitor the CCD temperature during the cooling process and regulation.

!!!WARNING!!! do not cool the camera before removing the air inside using the vacuum pump: air inside the camera will frost on the sensor potentially causing damages and leaving dirt particles. Never open the valve without the vacuum pump connected.

The user can set the Target T (°C) the CCD to be reached and regulated and then touch the Start button to start the cooling process

In order to monitor the cooling process, the **Current temperature** (°C) is displayed as well as the **Power** (%) of the TEC.

Moreover, the interface shows a **Temperature graph** reporting the temperature values during the past 5 minutes. The graph scale is automatically adapted, while a green band indicates the +/-0.1 °C tolerance allowed around the required temperature. Finally, the interface reports also the **elapsed time** since the cooling process started, the **mean** temperature in the past five minutes and the associated standard deviation (**err**).

Touch the **Done** button to leave this tool and go back to the desktop: the cooling process will continue in background. The Temperature tool can be activated at any time and, if a cooling process is running in background, the application will connect to the process and interact with it. Touch the **Stop** button to stop the cooling process: the TEC will be progressively turned off down to 0%.

SW Tools UG 5/14 rev D

Take photos



The **Take photos** tool provides the functions to define and start a sequence of photos.

Using the tabs, for each of the seven possible filters plus the shutter close position, the user can set:

- the number of exposures
- the exposure time (sec) of each exposure
- the horizontal and vertical binning
- the Enabled checkbox to include the current filter in the photo sequence

After completing the photo sequence definition, the user can save, if needed, these settings as a preset touching the **Save** button and inserting a file name.

To recall any saved **preset** file, select it from the available ones in the listbox.

Select the **Readout Format** by choosing it from the available ones in the listbox. The ones currently available are:

- 2 samples: computes the pixel value by averaging 2 samples with download time of about 10 seconds and a typical readout noise of 8e-
- 16 samples: computes the pixel value by averaging 16 samples with download time of about 35 seconds and a typical readout noise of 5e-

By default the exposures from different filters are executed in sequence, for example all the exposures for Red first, then the ones for Green and finally the ones for Blue. Using Interleave, it is possible to interleave the exposures of a selectable number of filters. For example, assume you want to take 2 exposures for the Red, Green and Blue filters. Using interleave "none" the sequence of exposures will be: Red, Red, Green, Green, Blue, Blue, while selecting the "3-4-5" interleave, the exposures of filters number 3,4 and 5 (counted in the tab order, that is Red,

Green and Blue in the above screenshot) are interleaved, so the exposures sequece will be: Red, Green, Blue, Red, Green, Blue. When using interleaved mode, exposures time, exposures number, binning and enable can only be set for the first filter in the interleaved sequence (Red in the above example) because it is assumed that the same parameters also apply to the other filters.

The user has to define a **Photo name** for the sequence, which will be stored by default in the camera internal SD card (use **Browse** to select a directory): each exposure will be saved in FITS format as <Photo name>_<filter number>_<exposure number>.fit
Start the exposures by touching the **Shot!** Button.

Note: During photo download from the ccd the camera turns off the display, the wifi, the ethernet and the fan in order to minimize read out noise. After the completion of the photo (buzzer sound signals it) all these functions turn on again. Your PC or Smartphone could need to restablish the connection to the camera.

Touch the **Done** button to leave the Take Photos tool and go back to the desktop.

SW Tools UG 7/14 rev D

Monitor



The **Monitor** tool can be used to follow or interrupt the photo sequence currently in progress. It provides the following information related to the current exposure:

- the current Photo number in the sequence for that filter
- the **exposure** time (sec)
- the binning (pixels h x v)
- the readout mode
- the filter name of "Shutter closed" during image download
- the current temperature (°C) and the TEC power (%)
- the supply voltage (V)

The box below (with LED digits) shows the **seconds before end** of the current exposure (sec)

At the end of each exposure, touching the **preview** button, the downloaded photo will be displayed in the viewer on the left. When touching the image, the corresponding image intensity


value is displayed in the **value** box.


Touch the Kill button to interrupt the current photo. A message box will ask whether to cancel only the current exposure or the whole photo sequence.

Touch the **off** button to switch off the monitor to save batteries power. The monitor can be switched back on by touching any point in the screen

Touch the **Done** button to go back to the desktop or to the Take photos tool.

View photo

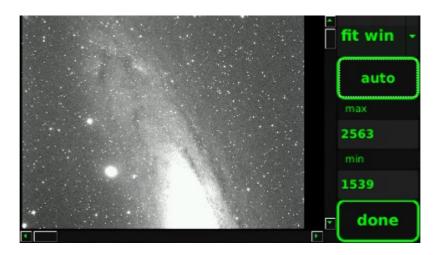

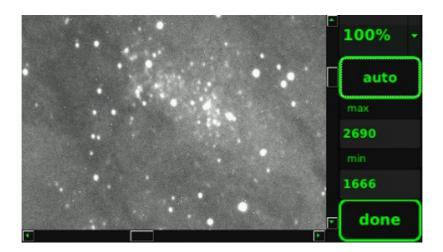

The **View photo** tool is used to inspect a photo stored on the camera.

At startup, the user is asked to choose a photo which is then opened, resized to fit the window and automatically stretched to enhance details visibility.

You can choose to enarge the photo up to 400% using the **zoom** listbox.

You can decide the stretch level of the image modifying the **max** and **min** values. This will modify the preview luminosity and contrast.

For color cameras, double clicking on any point of the image will color balance using that point RGB values.

For color cameras, when using the touch display, the color can't be displayed correctly because of hardware limitations. Instead when using VNC connection, the color is correctly displayed. To use mono image representation, modify the ast8300.cfg file changing the type from "color" to


"mono".

Touch the **Auto** button to automatically stretch the current view to enhance details visibility (the max and min values are modified accordingly).

Touch the **Exit** button to go back to the desktop or to the Take photos tool.


SW Tools UG 10/14 rev D

File Manager

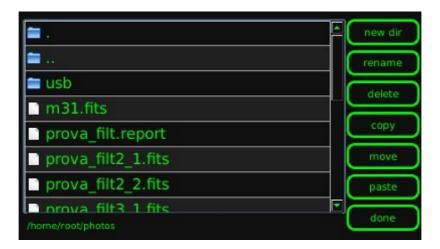

The **File Manager** tool is used to administrate the photos. The user can create a **new directory** and **rename**, **delete**, **copy**, **move** and **paste** a file.


Text Editor

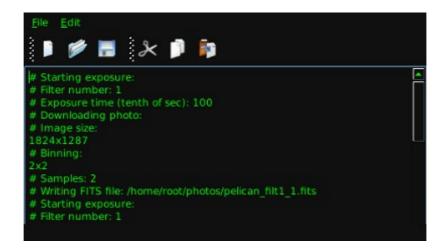

The **Text Editor** tool is used to read, modify and save text files. It allows basic operations like copy/cut/paste of text using the menu or the icon bar.

SW Tools UG 12/14 rev D

USB removal

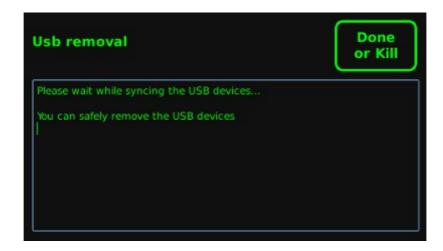

The USB removal tool is used to allow a safe removal of USB storages connected to the camera. Any connected device is available in the usb subdirectory in the main photos directory. The USB removal script is launched when pressing the button on the desktop. Touch Done or Kill to come back to the desktop after script execution or to kill the task if it gets locked.

SW Tools UG 13/14 rev D

Safe Shutdown

The **Safe Shutdown** tool is used to allow a clean camera shutdown. Being based on a true Linux operating system, the camera has to be shutdown as any other computer. After touching the Safe Shutdown button, the camera will emit a regular sequence of sounds and silences. As soon as this sequence ends, it is possible to disconnect the power cable.

SW Tools UG 14/14 rev D